

# MENABO

free time on the move

## Optional kit 00012270000

IT Istruzioni di montaggio

EN Fitting instructions

DE Montageanleitung

FR Instructions de montage

ES Instrucciones de montaje

BG инструкции за сглобяване

CS Návod na montáž

DA Monteringsvejledning

EL Οδηγίες συναρμολόγησης

ET Paigaldusjuhend

FI Asennusohje

HR Uputa za sastavljanje

HU A felszerelés módja

LT Pritvirtinimo instrukcijos

LV Stiprināšanas instrukcija

NL Montagehandleiding

NO Monteringsanvisning

PL Instrukcja montażu

PT Instruções de Montagem

RO Instrucțiuni de montare

RU Инструкции по установке

SK Návod na montáž


SL Navodila za pritrdjevanje

SV Monteringsanvisning


TK Uydurma talimat

ZH 裝修指導

AR كتيب التعليمات

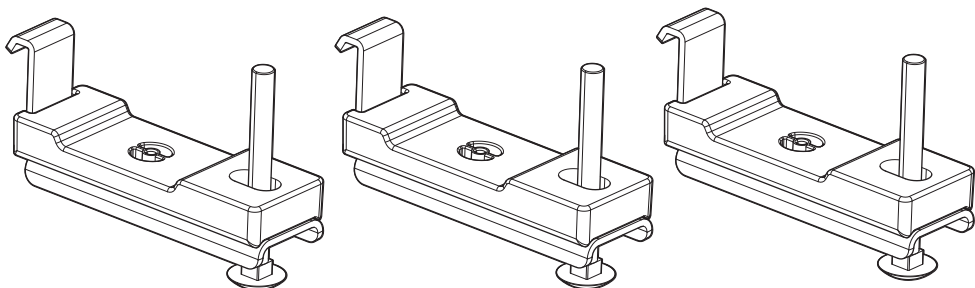

Watch video



Made in Italy

IT) Componenti (Inclusi)


EN) Components (Included)

FR) Composants (Compris)

DE) Die Komponenten (im Lieferumfang enthalten)


ES) Componentes (Incluido)

①

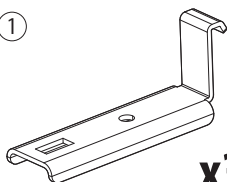

x3


②



M6x60

x3



③





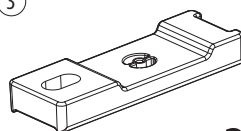





x3








1

x3

| N |   | Q |
|---|---|---|
| 1 |           | 1 |
| 2 | <br>M6x60 | 1 |

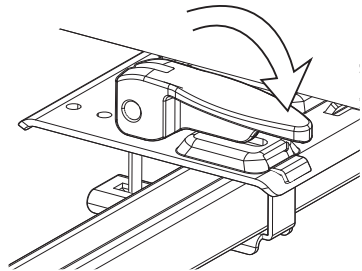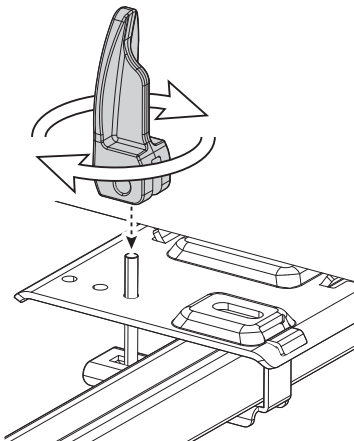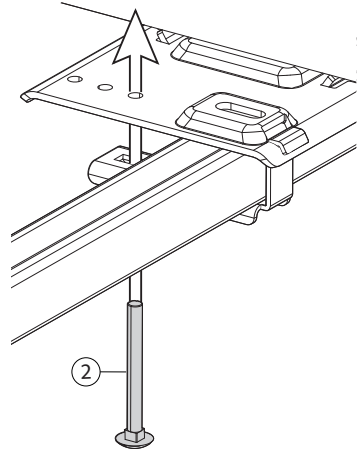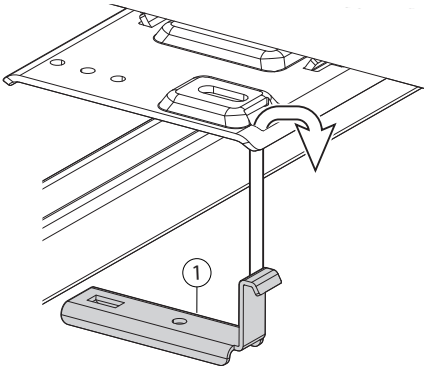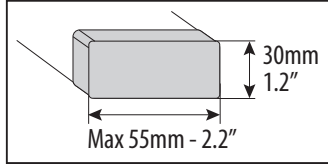

| N |  | Q |
|---|--|---|
| 1 |           | 1 |
| 2 | <br>M6x60 | 1 |
| 3 |           | 1 |

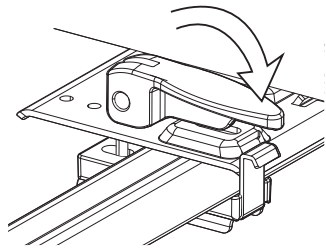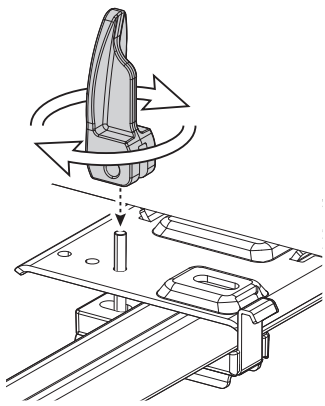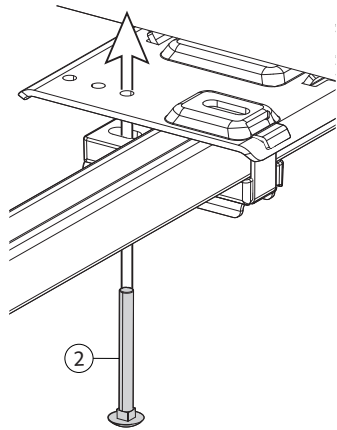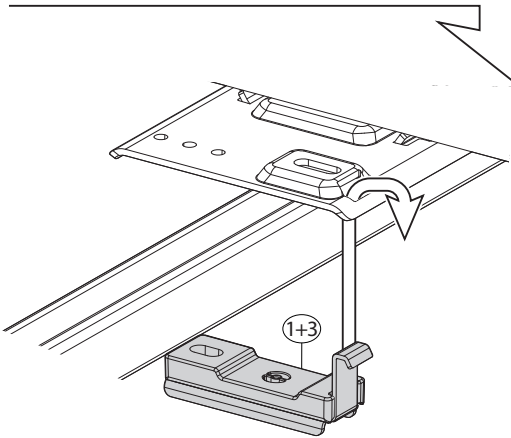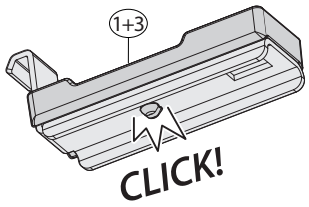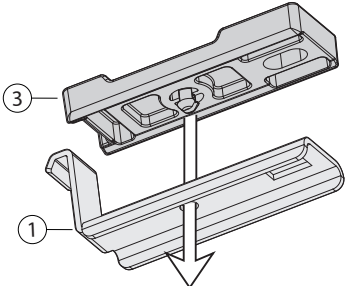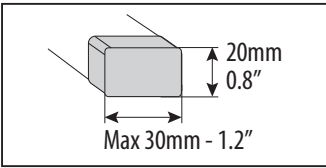



Flli Menabò S.r.l.  
Via 8 Marzo, 3 - Z.I. Corte Tegge  
42025 Cavriago (RE) ITALY  
customercare@flli-menabo.it  
www.menabocaraccessories.com



510035200000  
23/07/2024