

1

Kit 187004










CHEVROLET Trailblazer, 5-dr SUV, 02-09
 MERCEDES Sprinter, 4-dr Van, 06- /*10-
 RENAULT Espace, 5-dr MPV, 03-14
 VOLKSWAGEN Crafter, 4-dr Van, 06-16, 17-




ISO 11154-E

*North America


This kit is only for vehicles with T-Profile.

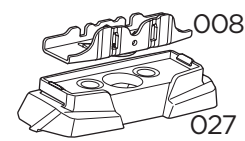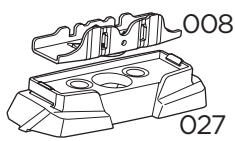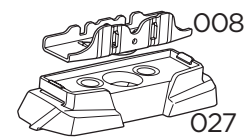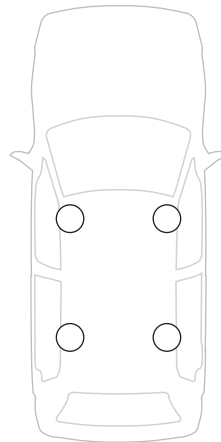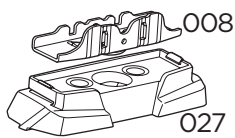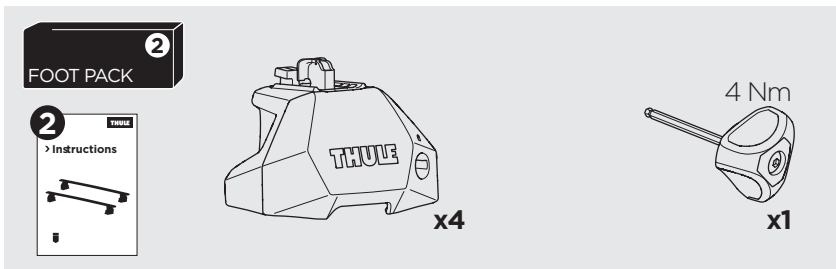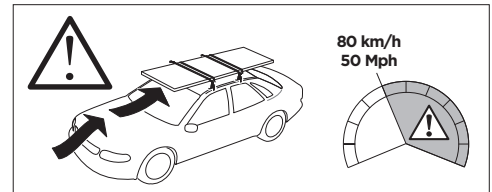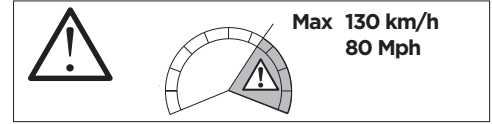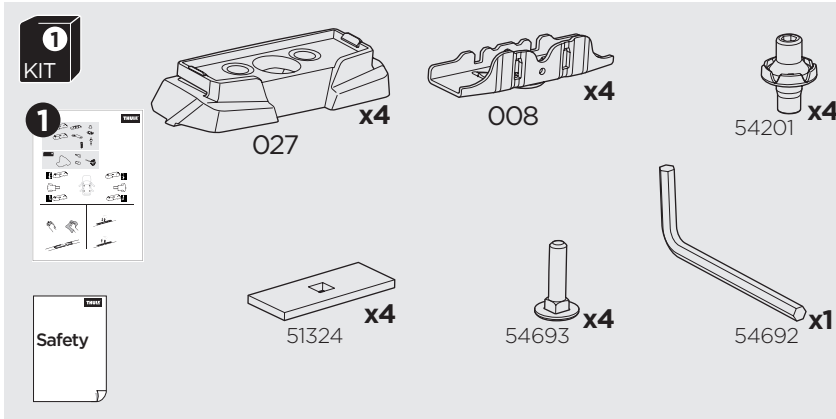


1

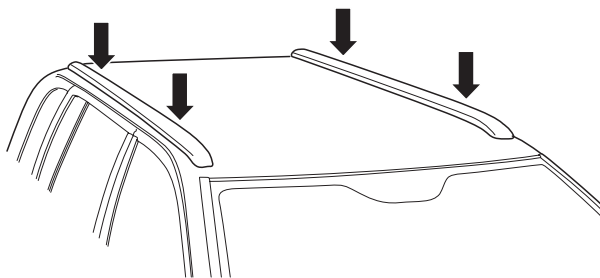


2

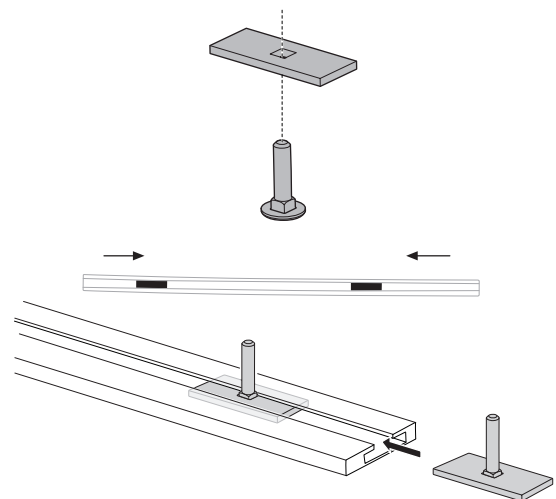


3

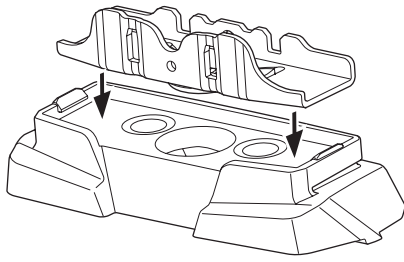


4

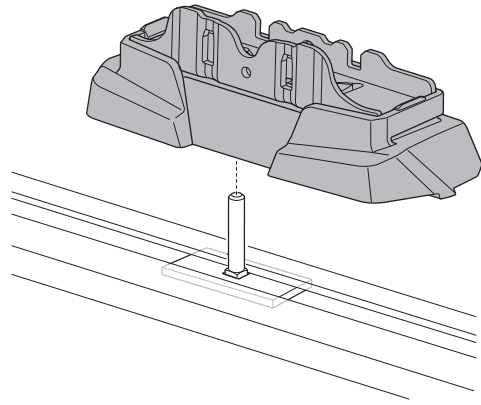


5

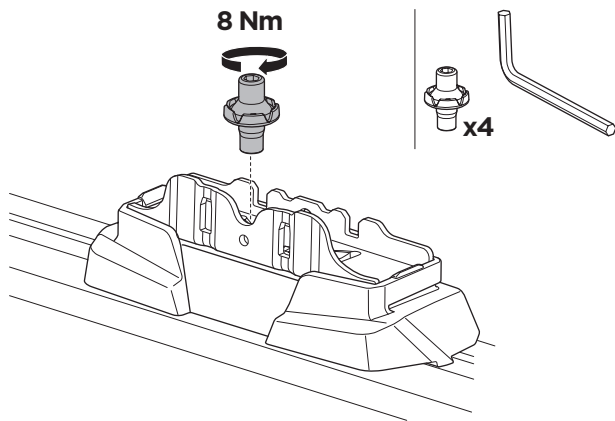

6

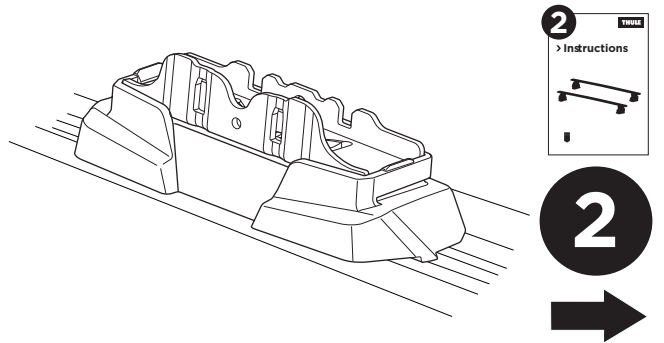

A

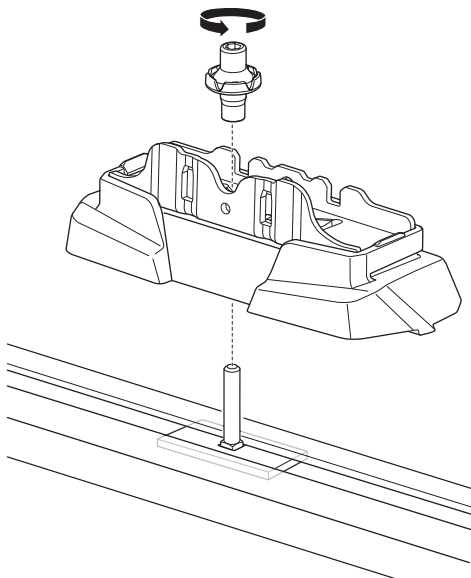

B

